



# RECESSED LIGHT

(INSULATING)


RL-3  
09/11

## QUESTIONS OR CONCERNS CONTACT CANARM AT:


1-800-265-1833 (English) 1-800-567-2513 (French) 1-800-267-4427 (USA)  
Monday through Friday 8:00 AM to 5:00 PM E.S.T.



## TOOLS AND MATERIALS REQUIRED:



Phillips  
Screwdriver



Wire Cutters



Pliers



Wrench

Wiring supplies  
as required by  
electrical code

## SAFETY PRECAUTIONS:

1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
2. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
3. CAUTION – RISK OF FIRE. CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
4. CONNECT THE GROUND WIRE (BARE COPPER OR GREEN) FROM YOUR FIXTURE TO THE GROUND WIRE (BARE COPPER OR GREEN) OR GROUND SCREW IN THE ELECTRICAL OUTLET BOX.
5. CAUTION : RISK OF FIRE, ONLY USE CANARM 3" TRIM.  
CANARM MODEL NUMBER : T3SB01, T3PB01, T3TG01.

**NOTE: Product May Not Look Exactly As Shown In Figures.**

## INSTALLATION:

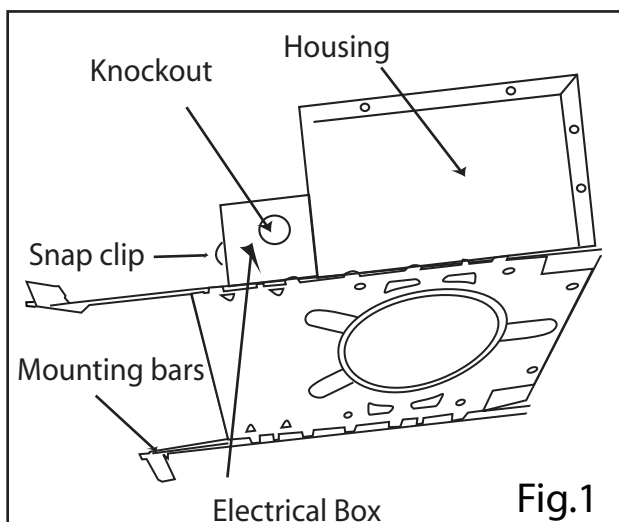


Fig.1

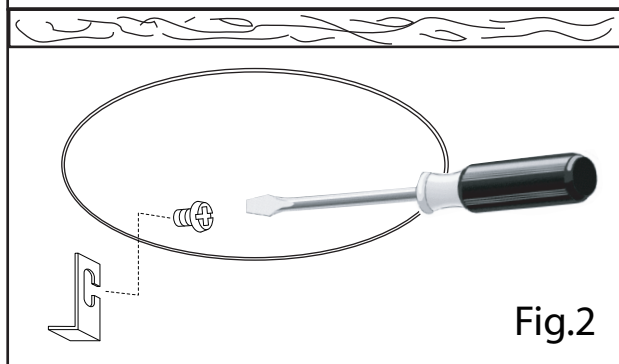


Fig.2

1. Align housing between joists by measuring the distance from the walls.
2. Spread the mounting bars. Align the housing to the lower edge of the joists and hammer in place.
3. Slightly loosen the 3 screws inside the can (no need to remove them completely from the can). Slide the "L" shape clip onto the screw. Tighten the screws after adjustment. (Fig.2)
4. Supply wire must be rated for at least 90 degrees celsius. Ensure that electrical box follows your local electrical code.
5. Remove the cover of the wiring box. Turn the fixture over and locate the appropriate knockout according to your service. Make sure the fixture is supported on the underside and break part of the knockout away using a hammer and screw driver. Twist out the knockout using pliers.
6. Connect the ground wire to the ground screw located near the center knockout, if applicable. Connect the black wire from the fixture to the black wire from the electrical box. Connect the white wire from the fixture to the white wire from the electrical box. Connect green wire to bare copper wire in electrical box.
7. Tuck in wires and replace cover.
8. Install the proper bulb - Max 35 w GU10 Shielded(not included) and Canarm Trim as specified above (not included).

**NOTE:** Please use metal conduit if required by local electrical code.